

Digital Music Library

N1 EX/N10/N100 Series

User Manual

This manual uses sample screenshots captured on firmware version 4.01. Depending on the firmware version that is installed on your Digital Music Library, functions described and screenshots contained in the manual may appear

Notice

N1 EX

Notice

For Customers in Europe

CB

Norsk

N10/N100

Regulatory Compliance Information

Contents

 
| | |
|--|---------------|
| Notice | 1 |
| N1 EX | 1 |
| Regulatory Compliance Information..... | 1 |
| N10/N100 | 3 |
| Regulatory Compliance Information..... | 3 |
| Safety Precautions | 3 |
| Warning Symbols and Graphical Icons on the Product Label | 4 |
| Chapter 1 Getting Started | 9 |
| Summary of Manual..... | 9 |
| Chapter 2 Basic Usage | 10 |
| Diagrams..... | 10 |
| N1 EX..... | 10 |
| N10/N100..... | 13 |

Confirming Imported Files27

Downloading Music Fo8 19m S (t 20.tr)8 1eafirmiSi1 (t) 5iles




If using the N10/N100, press the Up/Down buttons and select "Format", then press the Menu/Enter button.

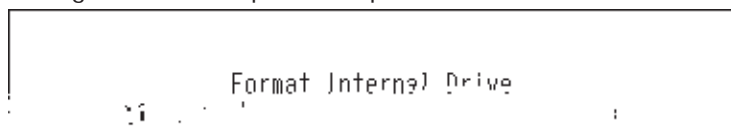


6 Make sure that all files on the d 10.2a(ivpr) 10.1 ca(wne e d 5-6 sedwnefpr)3 6.1 sur 46.1To leorman press the Un.

2 Press the Up/Down buttons and select “Settings”, then press the Menu/Enter button.

 3 Press the Up/Down buttons and select “Drive”, then press the Menu/Enter button.

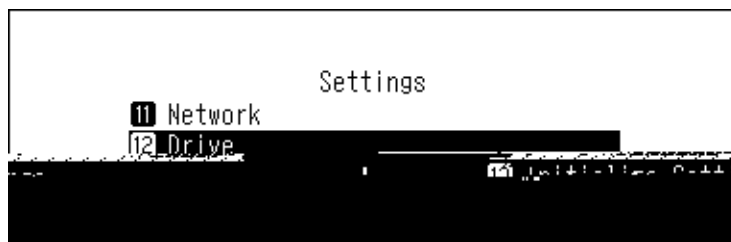

 4 Press the Up/Down buttons and select “Format USB Drive”, then press the Menu/Enter button.



5 Press the Up/Down buttons and select “Format”, then press the Menu/Enter button.

Note:

7

1

